


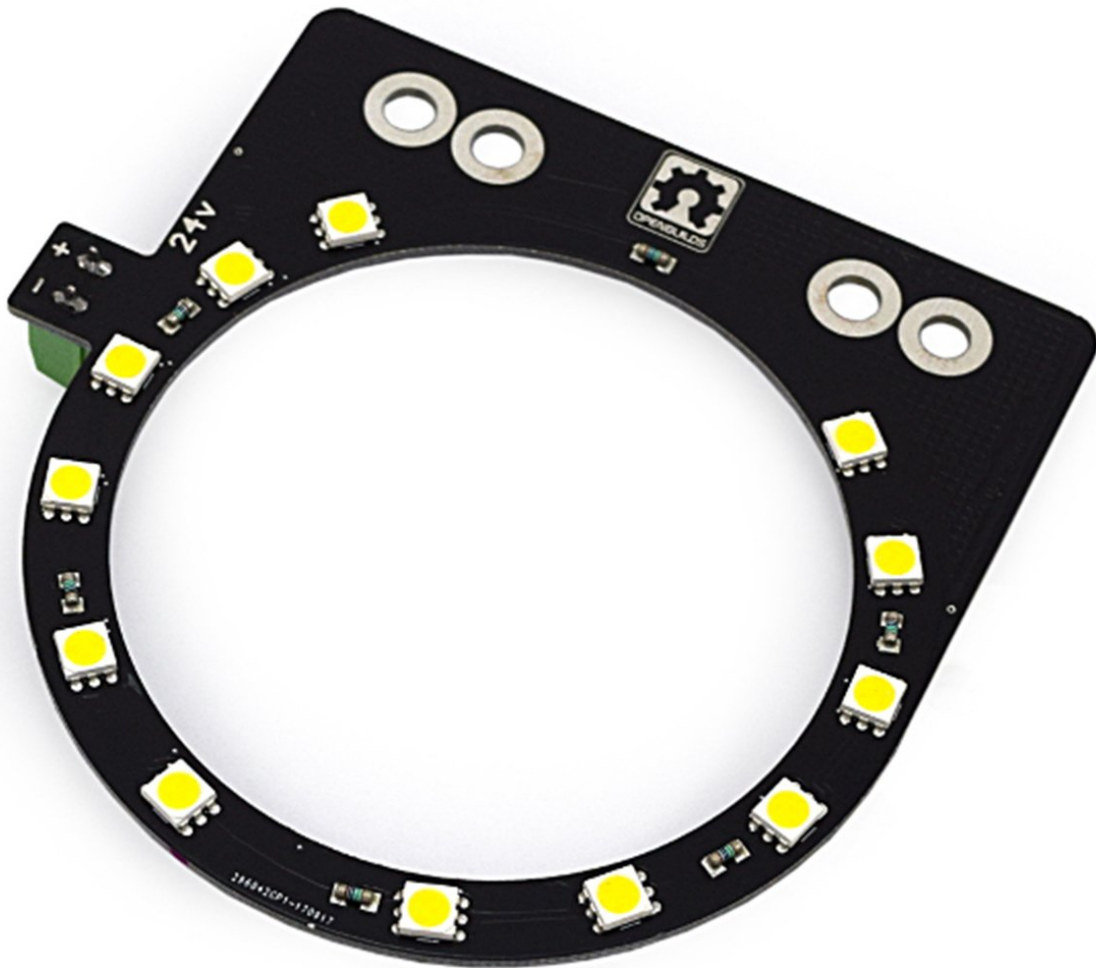

How To Connect LED Light Ring

Written By: Robert




Step 1 — Mounting & Wiring



- The LED Light Ring mounts onto the two back threaded holes on the underside of the Router-Clamp.
 - ① If you have the Mafell, you will need to mount it over the top of the Dust-Shoe-Adaptor.
 - ① Use two spare M5-Button-Head-Bolt-8mm bolts to secure it to the back two threaded holes.
 - ① You will need to forgo the two front mounting bolts.
 - ① We sell [Silicone Wire](#) to connect it. Make sure you buy enough to go through the Drag-Chain-X.
 - The lengths you will need of each colour is: 500mm X-Axis = 1m. 750 or 1000mm X-Axis = 2m. 1500mm X-Axis = 3m.
- Wire the LED Light Ring into the Extruder 1 Heater outputs on the controller.
 - There is a slot in the Controller-Case-Body directly opposite for the wires.

Step 2 — Programming

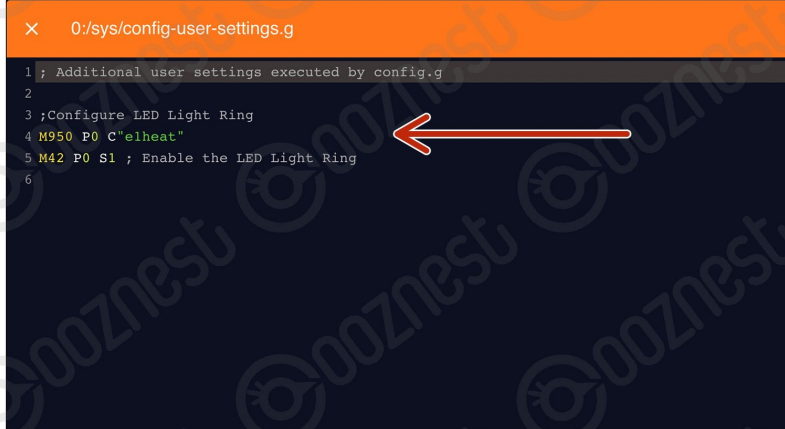

```
0:/sys/config-user-settings.g
1 ; Additional user settings executed by config.g
2
3 ;Configure LED Light Ring
4 M950 P0 C"e1heat"
5 M42 P0 S1 ; Enable the LED Light Ring
6
```

- Under File Management > System click on 'config-user-settings.g'. Then add the following lines

- ;Configure LED Light Ring

- M950 P0 C"e1heat"

- M42 P0 S1 ; Enable the LED Light Ring

- ⓘ This will turn the LED Light Ring on when the machine is turned on.

⚠ Press the software emergency stop in the top right corner to restart the controller.

- ⓘ Use M42 P0 S0 to turn the LED Light Ring off.

- ⓘ The S value can be between 0 - 1. It is a sliding scale between off and full brightness.

Thanks for following the guide. Any issues, please contact us!