

2. Connecting your Duet to a Network -Ethernet

This Guide will provide the steps in Connecting your Duet by Ethernet directly to your Computer

Written By: Ryan Christy

	All Apps Documents Settings V	∕eb More ▼	Feedback ····				
ŵ	Best match						
0	Command Prompt App	\rightarrow					
	Settings	Commar	nd Prompt				
	* Turn high contrast on or off	×	App				
	다 Choose if the Narrator key is locked	>					
	Use Sticky Keys to press one key at a	> Dpen					
	time for keyboard shortcuts	Run as administrator					
	 Replace Command Prompt with Windows PowerShell when using 	> Den file location					
	E Manage app execution aliases	→ Pin to Start					
	Allow the shortcut key to start Sticky Keys						
	다 Change Narrator's keyboard layout	>					
ዲ	Search the web						
	✓ comma - See web results	>					
ŝ	Documents (4+)						
2							

Step 1 — Command Prompt

Best match		Command Prompt -
Command Prompt App	\rightarrow	c:\Useri\Ryan Christ pipconfig Mindows IP Configuration
Settings	Command Prompt	Ethernet adapter Ethernet: Media State : Media disconnected
G Choose if the Narrator key is locked	>	Connection-specific DNS Suffix . : Nireless LAN adapter Local Area Connection* 1:
Use Sticky Keys to press one key at a time for keyboard shortcuts	> Copen	Media State
 Replace Command Prompt with Windows PowerShell when using 	>	Media State Media disconnected Connection-specific DNS Suffix . : Nireless LMN adapter Wi-Fi:
 Manage app execution aliases Allow the shortcut key to start Sticky 	> Pin to taskbar	Connection-specific DNS Suffix ::
Keys	>	PPv4 Address,
명 Change Narrator's keyboard layout Search the web	1	e. vozers tryan en steyz
Comma - See web results Documents (4+)	>	

(i) This step only has to been done if your computer is also connected to an external Wifi Network.

- Open Command Prompt on your Computer.
- In Command Prompt type *ipconfig*
- Under the Wireless LAN Adapter make note of IPv4 Address.
- (i) The Duets ip Address will need to be on a different Subnet for example if your adaptor is "192.168.1.10" our Etherent Adpator for the Duet needs to be "192.168.2.10

Step 2 — Configure Ethernet Port

	All Apps Documents Settings Web Best match C Apps Apps Run → Search the web P control - See web results → Settings (7+)	More * Feedback ***			en hi minde in Neurith sander E + 12 0. ^{10 A} ^{10 A} ^{10 A} ^{10 A}
--	--	---------------------	--	--	---

- Open Control Panel on your computer.
 - Access the Network and Sharing centre.
 - Click Change Adaptor Settings.
 - Right Click on the Ethernet Port to Edit the properties of that Device.

Step 3 — Configure Ethernet Port Part 2

	vections					
	Disable this network device Diagnose this connection Rename this connection Change settings of this connection					
😰 Hetrock Connections 📃 🔍	iet Mi-Fi					
🗧 🔅 🕆 😰 > Control Panel > Network and Internet > Network Connections 🖉	sik cable unplugged Ocznest Wifi					
Organize 🔻 Disable this network device Diagnose this connection Rename this connection Change settings of this connection 🎉 🔹 🔳 🔮	k PCle GBE Family Controller all Realtek RTL8811AU Wireless LAN					
Network Cale unplugged Scale With UW Grand Cale and Cale						
	Ethernet Properties X Internet Protocol Version 4 (TCP/IPv4) Properties X					
Ethernet Properties ×	Networking Sharing General					
Networking Sharing Connect using	Connect using: You can get IP settings assigned automatically if your network supports					
Connect samp	Reatek PCIe GBE Family Controller this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.					
Configure	Configure					
Get for Morosoft Networks A	This connection uses the following items:					
ST THE DY Prove Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software Software	V Ple and Printer Sharing for Microsoft Networks					
subcost literate di defense il defense Portoni subcost literate di defense il defense Portoni	✓					
Termet Protocol Version 6 (TCP//Pv6) v	Additional and the second second and the second secon					
Instal. Unversit Properties	A Internet Protocol Univer A Internet Protocol Version 6 (TCP/IPv6) Cobtain DNS server address automatically					
Description Transmission Control Protocol/Internet Protocol Time default inde area internet, control that provides communication	< >>					
the set of memory processing provides and pr	Instal Properties Preferred DKS server: 8 . 8 . 8					
OK Canoel	Description Transmission Control Protocol/Internet Protocol. The default Alternate DNS server: 4 , 2 , 2 , 1					
	wide area network protocol that provides communication					
	adios diverse site contracted networks. Unatidate settings upon exit Advanced					
2 items 1 item selected [11 mm]	OK Cancel OK Cancel					
	vselected					

- Click on the heading -> Internet Protocol Version 4 and access its properties.
- Click -> Use the following IP address:
- Create an IP Adress that reflects the Subnet discovered previously in the Command Prompt -> ipconfig.
 - (i) You can use the example shown, please ensure you place it on a different Subnet, .2 or .1

A The Subnet Mask will auto generate, It is not required to set a default gateway.

Step 4 — Enable Network Module

8 мг Пара мана мар Пара № 0 0 0 м мг / к на на 11 0 0 0 0 10 0 0 0 0 0 0 0 0 0 0 0 0	- ¤ ×	3	- C X	[1] [1] [1] [1] [1] [1] [1] [1] [1] [1]	- D X . 6 #
				Markan Markan and Jan Kanana and Kanana Angela (2014). New Principal Angela (2014) and an angela (2014) and an angela (2014). Angela (2014) and an angela (2014) and an angela (2014) and angela (2014) and angela (2014) and an angela (2014).	
C Que dans the Tore at		1000 11 700 101 20 1000 11 100 101 20 1000 10 10 100 100	v	Marine	v in Sand Yes (P3)
La venez.	(500.000 g)	Seagurs (359) (158) (Sea	ر الا المحمد المراجع (1999 م) (1999 a) (19	Longer (30	10 (TRUE), L'have, L'have, L'have, d'ager and convenient 🖗 HF . (T) .

- First, check the status of the Ethernet Module by sending command "M552" to Duet.
 - (i) If Duet returns Wifi or Ethernet module is disabled, put it into idle mode it by sending command "M552 S0". If it returns Wifi or Ethernet module is idle, proceed to the next step.
- Send the Command M552 S1 P-ipadress
 - (i) We have sent M552 S1 P192.168.2.12
 - ▲ The final number of this IP address has to be different from the final number of the IP used on the ethernet port configuration. We used 192.168.2.14 on our ethernet port, so have used 192.168.2.12 on the Duet.
- Send M552 to confirm the Network is enabled and connected to the correct IP Address.

Step 5 — Open Duet Webcontrol

Wet € → 102 Matrixes - 112 MB2/1 May Dast ▲ ■	Data & forwardmanne, Dat hor Mat Matter Bat OC = Gaust - 7 lasts , & Gais (Sard) & tast Sands & 1		Confg-Notepad The Edit Format View Help ; Configuration file for Duet ; executed by the firmarce version 1.4 : General proferences	start-up			~ 0
Machine Status Head X Y Position 0.00 0.00 Speeds Requested Speed 0,mms 0,mms	Image: Constraint of the second of		690 M453 ; Network M552 51 P192.168.2.12	; Set absolute coordinates ; Put the machine into CNC Modes ; Set machine name ; Enable network			
Sensors Vin MCU Teng 1.6 V 32	0 Ved Morret Ved Morret	Add tod Corporation - • User Defined Macros	H586 P1 50 H586 P2 50 ; Drives H569 P0 50	; Enable HTTP ; Disable FTP ; Disable Telmet ; Drive 0 goes forwards			
Code Console G-Code Files	Unit €.5.00 €.5.00 €.5.00 €.5.00 €.5.00 €.5.00 5.00	+<0.5	M569 P1 S1 M569 P2 S0 M569 P3 S1 M584 X0 Y1:3 Z2 M92 X400 Y400 Z400 M350 X16 Y16 Z16 I1	; Drive 1 goes forwards ; Drive 3 goes forwards ; Apply custom drive mapping ; Set steps per mm ; Configure microstepping with interpolation			
Ø Macros Ø Fiaments Ø Settings	A The billioning area are of former X, Y, Z Ensure Custorial Freed amount in mm. Freed amount in mm. Vio 50 20 10 5 1	e nead	M566 X500 Y500 Z500 M203 X2500 Y2500 Z2500 M201 X150 Y150 Z150 M906 X2400 Y2400 Z2400 I100 ; Axis Limits	; Set maximum instantaneous speed changes (mm/min) ; Set maximum speeds (mm/min) ; Set accelerations (mm/sr2) ; Set motor currents (mÅ)			
	000 30 20 90 5 1 60 30 15 3 1	41.05-00	M208 X0 Y0 20 51 M208 X550 Y520 Z94 50 ; Endstops M574 X2 Y2 Z2 50 ; Tools -M54 P1 <"YY7.Proha"	; Set axis minima ; Set axis maxima ; Set active low endstops • fimifica XV7 Tourch Proche Toon]			
					Unix (LF)	Ln 11, Cel 22	100%

- Open your browser and type the IP address assigned to the Duet. We have used 192.168.2.12 as an example.
- You should now see the main control page for the Duet!
- (i) Remember to Bookmark the Website and add it to your favourites for easier future access.

Thanks for following the guide. Any issues, please contact us!