

2. Connecting your Duet to a Network -Ethernet

This Guide will provide the steps in Connecting your Duet by Ethernet directly to your Computer

Written By: Robert

	All Apps Documents Settings V	Veb More	▼ Feedback ····
ŵ	Best match		
0	Command Prompt App	\rightarrow	PL.
	Settings		Command Prompt
	☆ Turn high contrast on or off	>	Арр
	다 Choose if the Narrator key is locked	> _	
	Use Sticky Keys to press one key at a time for keyboard shortcuts	>	 Open Run as administrator
	Replace Command Prompt with Windows PowerShell when using	>	Den file location
	Manage app execution aliases	>	- Pin to taskbar
	Allow the shortcut key to start Sticky Keys	>	
	다 Change Narrator's keyboard layout	>	
8	Search the web		
	✓ comma - See web results	>	
\$	Documents (4+)		
2			

Step 1 — Command Prompt

All Apps Documents Settings V	Neb More 🔻 Feedba	back ···	
Best match Command Prompt		Command Prompt	×
 Command Prompt App Settings Turn high contrast on or off Choose if the Narrator key is locked Use Sticky Keys to press one key at a time for keyboard shortcuts Replace Command Prompt with Windows PowerShell when using Manage app execution aliases Allow the shortcut key to start Sticky Keys Change Narrator's keyboard layout Search the web comma - See web results Documents (4+) 	Command Prompt App C Open C Open C Open Open file location P In to Start P In to taskbar	C:\Users\Ryan Christ Vindows IP Configuration Ethernet adapter Ethernet: Media State	~

- ③ This step only has to been done if your computer is also connected to an external Wifi Network.
- Open Command Prompt on your Computer.
- In Command Prompt type *ipconfig*
- Under the Wireless LAN Adapter make note of IPv4 Address.
- The Duets ip Address will need to be on a different Subnet for example if your adaptor is
 "192.168.1.10" our Etherent Adpator for the Duet needs to be "192.168.2.10

Step 2 — Configure Ethernet Port

All Apps Documents Settings	Web M	ore 🔻 Feedback …				
Sear match Control Panel App App Settings Run Windows Administrative Tools Search the web Control -See web results Settings (7-)	→ > > >	Control Panel App Corteo Percent Network and Sharing Center Device Manager Device Manager Uninstall a program	Maria Sector and Sect	v D ≥ x v D hast (austria) } se s s s s s s s s s s s s s s s s s s	Australian Australiantial Australiantiantial Australiantial Australi	v 8 × 1 × 100 benkling (v 8 − 12 €
R. ©					. Time the interest	21.80

- Open Control Panel on your computer.
 - Access the Network and Sharing centre.
 - Click Change Adaptor Settings.
 - Right Click on the Ethernet Port to Edit the properties of that Device.

Step 3 — Configure Ethernet Port Part 2



- Click on the heading -> Internet Protocol Version 4 and access its properties.
- Click -> Use the following IP address:
- Create an IP Adress that reflects the Subnet discovered previously in the Command Prompt -> ipconfig.
 - ② You can use the example shown, please ensure you place it on a different Subnet, .2 or .1
- △ The Subnet Mask will auto generate, It is not required to set a default gateway.

Step 4 — Enable Network Module

Вит. с на мани ма Права По Ополь и и и во по	1 of the start fuel spec formed 1 of the start fuel spec	X 	But (denoted the formed (a) Note: Set former (a) (b) Note: Set former (a) (b) (b) (b) (b) (b) (b) (b) (b) (b) (b	
the view of the second	ος (PR @ 2) 	000	Mark Annual Mark Bark Andrew (M. 1999) Mark Hand Mark (and gand for all short (M. 1995) Lin, and (P. all short (M. 1995) Lin J. 2007-0007) Mark Hand Mark (and gand for all short (M. 1995) Lin, and (P. all short (M. 1995) Lin J. 2007-0007) Mark (M. 1995) Mark (M. 199	
Reword. How	Service COM UTION, A Service	tioned is expert and convected ∰ (#97 ⊕ (*1 ⊕ 1928 ⊕ (*2 ⊕) 560,0000	bedget ()	MI (FINE L New

- First, check the status of the Ethernet Module by sending command "M552" to Duet.
 - If Duet returns Wifi or Ethernet module is disabled, put it into idle mode it by sending command "M552 S0". If it returns Wifi or Ethernet module is idle, proceed to the next step.
- Send the Command M552 S1 P -ipadress
 - We have sent M552 S1 P192.168.2.12
 - The final number of this IP address has to be different from the final number of the IP used on the ethernet port configuration. We used 192.168.2.14 on our ethernet port, so have used 192.168.2.12 on the Duet.
- Send M552 to confirm the Network is enabled and connected to the correct IP Address.

Step 5 — Open Duet Webcontrol

	C	192.168.2.12								_			
=	Wo	orkBee CNC M	lachine			Send code				> SEND			
	Mach	ine Control		Doritions & Co.	wate					Ida			
				Work	×			Machin	e X	Y			
		Console		Position	-115.2	-240.3	-50.3	Positio	n 0.0	0.0	0.00		
	⊞	Height Map											
a	Machine Movement File Management												
		lobs		HOME XYZ					COMPENSATION	& CALIBRATION -			
	, ,	Massas		LICHE Y	Z X 100	4 7 50	4 X 10	4 7 1	4 7.01	X+0.1 X	Y 11 X	T	
	<i>"</i>	0-1			4 14 400	4 1 100	4 74 10		4 1 1 1	X.0.1 X		┢	
	*	System		HOMEY	X Y-100	(¥-50	(Y-10	C Y-1	< Y-0.1	Y+0.1 >	¥+1 3	┝	
~	Settin	igs	^	HOME Z	< Z-50	< Z-25	< Z-5	< Z-0.5		Z+0.05 >	Z+0.5 >	L	
	٠	General		GOTO WORK XYZ ZERO									
	۵	Machine-Specific		The following axes are not homed: X, Y, Z									
				Touch Probe C	Control							Fro	
				Endmill Diameter (mm) 6.35					PROBE CORNER				
				No Job running.									
				Job Control				÷ Z-Axis Adj	ustment Offset				

- Open your browser and type the IP address assigned to the Duet. We have used 192.168.2.12 as an example.
- You should now see the main control page for the Duet!
- Remember to Bookmark the Website and add it to your favourites for easier future access.

Thanks for following the guide. Any issues, please contact us!