




## 8. Assemble Router Mount

This guide will go through how to assemble the WorkBee Router Mount

Written By: Robert

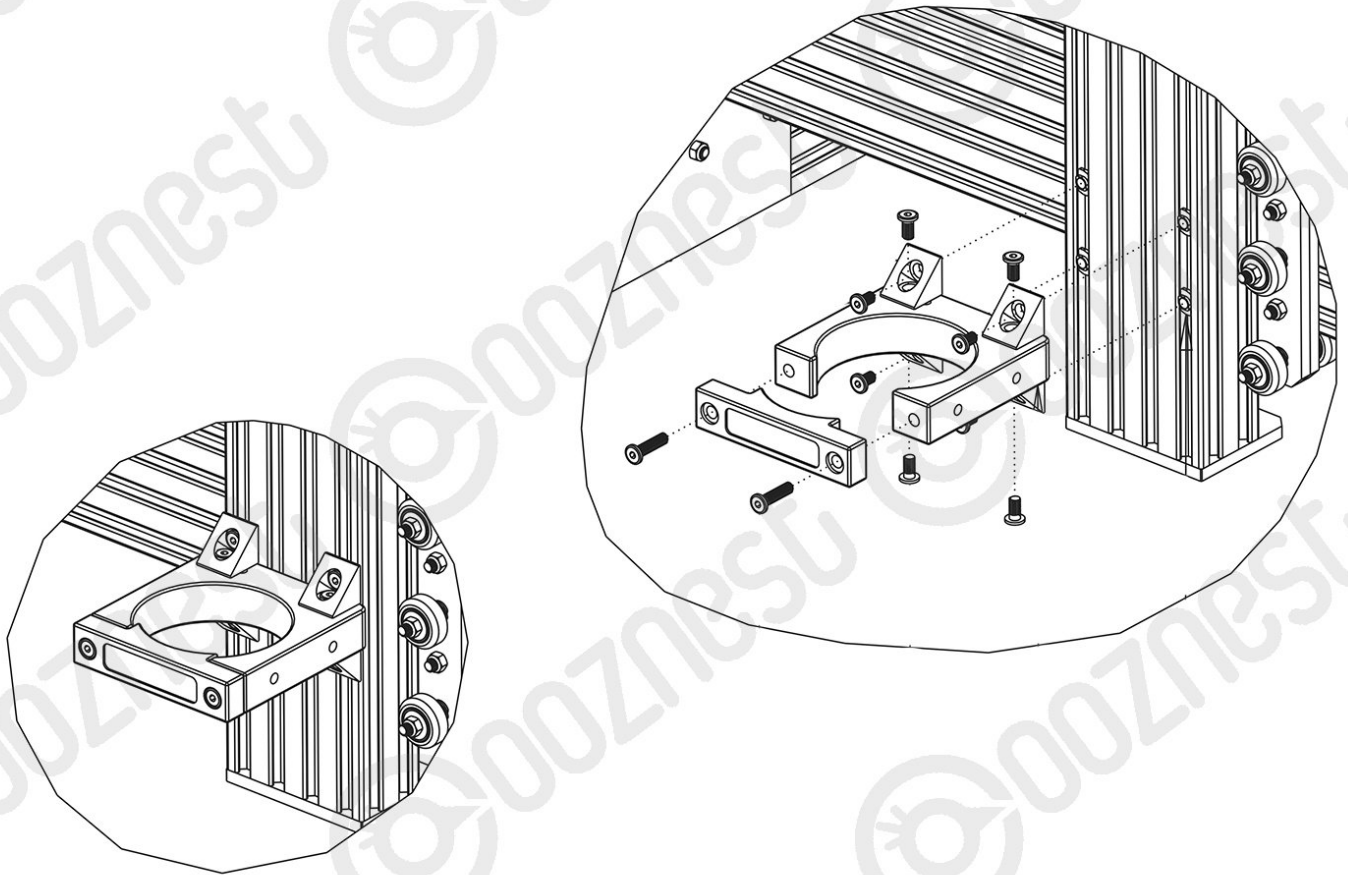




### PARTS:

- Router Mount (1)
- Angle Corner (4)
- M5 Low Profile Bolt - 20mm (2)
- M5 Low Profile Bolt - 10mm (4)
- M5 Low Profile Bolt - 8mm (4)
- M5 Drop-In Tee-Nut (4)

## Step 1 — Router Mount Assembly

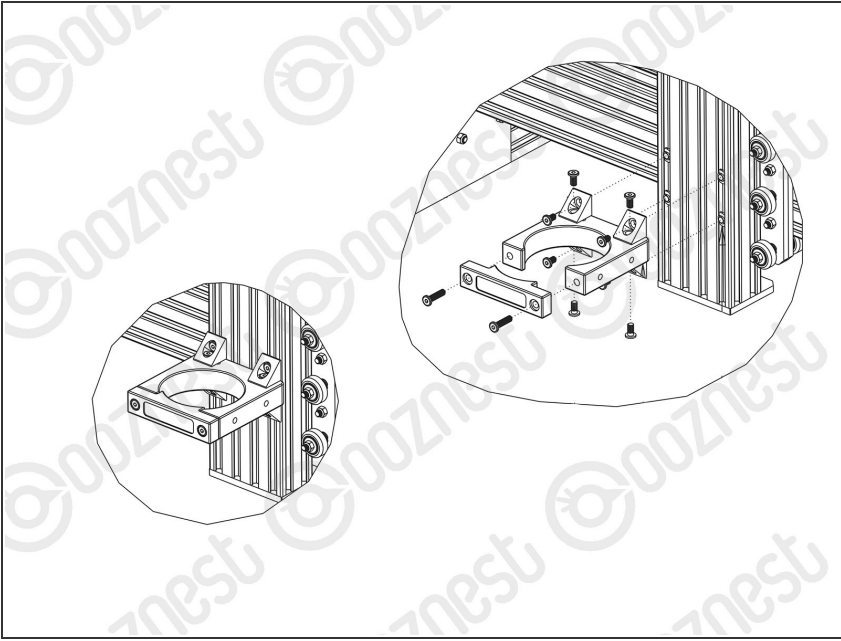

- On the outer most holes on the Router-Mount attach 4 x Angle-Corners using 4 x M5- Low-Profile-10mm Bolts.
  - ⚠ Make sure the angle corners are flush with the back of the Router-Mount.
- Attach the Router-Mount to the Z-Axis extrusions using 4 x M5-Low-Profile-8mm Bolts and 4 x M5-Drop-In-Tee-Nuts.
  - ⚠ Make sure the Router-Mount is perpendicular to the extrusion.
  - ℹ The Router-Mount position depends on what jobs you are planning to do, however 1/3 of the way up the extrusion is a good position for normal work.
- Clamp the router inside the Router-Mount using the front plate and two M5-Low-Profile- 20mm Bolts.

Thanks for following the guide. Any issues, please contact us!